



Honeywell

Honeywell Vista Quick Reference Guide

Arming Buttons:



Enter your 4 digit code followed by:

- Off: Disarms the system
- Away: Arms entire system with motion(s) and delay
- Stay: Arms perimeter of system with delay (No motion)
- Max: Arms entire system with motion and NO DELAY
- Instant: Arms perimeter of system with NO DELAY (No Motion)

Adding or Changing Codes:

Enter your 4 digit code + 8 + 02 + new code twice

If adding new code for someone else you will enter 03 or 04 or 05 etc in place of the 02

Bypassing a zone:

Enter your 4 digit code + BYPASS + Zone # (01, 02, 03, etc.) + *

(Note: The bypass is only for this arming period. The zone is restored once you disarm)

Door Chime:

Enter your 4 digit code + CHIME (This turns the chime feature on and off)

Panic Buttons:

Press & hold as shows below to activate panic alarms **(Note: Immediate Dispatch)**

Press and hold -- **FIRE**

Press and hold -- **POLICE**

Press and hold -- **MEDICAL**

Resetting System & Clearing Troubles

Pressing the * key will show you faulted zones and check system troubles

Enter your 4 digit code followed by OFF multiple times to reset or clear system

If you have a **fire** alarm you must enter your 4 digit code and OFF to reset system

To cancel false alarms or test your system call – (913) 432-4545

For sales or service for you Atronic alarm call – (913) 362-0000

**YOU MAY CALL EITHER OF THESE NUMBERS AFTER HOURS TO REACH OUR 24 hr
EMERGENCY TECHNICAL SUPPORT TECHNICIAN**

WWW.ATRONICALARMS.COM