



## GE Concord Quick Reference Guide

### Arming Buttons: (Press Once)



- Stay: Arms the perimeter of the system (No Motions)
- Away: Arms the entire system (including motions)
- Disarm: Press DISARM followed your code to disarm system

**NO DELAY:** After pressing AWAY or STAY press the 4 button to arm the system with NO entry/exit delay

### Changing Your Code:

Press 9 + your code + Scroll down to **User Codes** and press #. Scroll down to **System Master Code** and press #. Enter new 4 digit code and press #.

**Add Another User:** Press 9 + your code + Scroll down to Regular User Codes and press #. Select user number 000-229 and press # + new 4 digit code + #.

**Delete a User:** Enter your master code in place of the users code and press #.  
Press \* + 00 + # to exit menus.

### Panic Buttons:

Press & hold as shows below to activate panic alarms **(Note: Immediate Dispatch)**

Hold **RED FLAME** button for **FIRE**

Hold **GREEN CROSS** button for **MEDICAL**

Hold **BLUE SHIELD** button for **POLICE**

### Door Chime:

Simply press 7 + 1 to turn door chime on and off.

### Resetting System & Clearing Troubles:

If you have any “trouble” type messages always try pressing \* to clear the system

If the system is beeping and you are unsure why try pressing \* to clear the system

If you have a **fire** alarm you must arm and disarm the system to reset your system

To cancel false alarms or test your system call – (913) 432-4545

For sales or service for you Atronic alarm call – (913) 362-0000

**YOU MAY CALL EITHER OF THESE NUMBERS AFTER HOURS TO REACH OUR 24 hr  
EMERGENCY TECHNICAL SUPPORT TECHNICIAN**

**WWW.ATRONICALARMS.COM**