



# Honeywell Lynx 3000 System

## Quick Reference Guide



### ARMING YOUR SYSTEM

Enter your 4 digit code followed by:

- **STAY:** Arms perimeter, with no motion, with entry/exit delay
- **AWAY:** Arms entire system, with motion, and entry/exit delay
- **OFF:** Disarms the system

For NO DELAY: Press 0 (NO DELAY) after arming system to arm with NO entry/exit delay.

### ADDING OR CHANGING CODES

Enter your 4 digit code + 8 + 02 + new code twice. If adding new code for someone else you will enter 03 or 04 or 05 etc in place of the 02.

### BYPASSING A ZONE

Enter your 4 digit code + BYPASS + ZONE # (01, 02, 03, etc) + \*  
(NOTE: The bypass is only for this arming period. The zone is restored once you disarm.)

### DOOR CHIME

Enter your 4 digit code + CHIME (This turns the chime feature ON and OFF)

### RESETTING SYSTEM & CLEARING TROUBLES

Pressing the \* key will show you faulted zones and check system troubles. Enter your 4 digit code followed by OFF multiple times to reset or clear system. If you have a fire alarm, you must enter your 4 digit code and OFF to reset system.

### CANCEL FALSE ALARMS OR TEST SYSTEM

Available 24 hours a day - 913.432.4545  
You may call this number after hours to reach our 24-hour emergency technical support technician.

### IMMEDIATE DISPATCH! PANIC BUTTONS

Press and hold both buttons at the same time as shown below to activate panic alarms.

**1** & **\*** for FIRE

**\*** & **#** for POLICE

**3** & **#** for MEDICAL