



Honeywell Vista System

Quick Reference Guide



ARMING YOUR SYSTEM

Enter your 4 digit code followed by:

- **STAY:** Arms perimeter, with no motion, with entry/exit delay
- **AWAY:** Arms entire system, with motion, and entry/exit delay
- **INSTANT:** Arms perimeter, with no motion, with no entry/exit delay.
- **MAX:** Arms entire system, with motion, and no entry/exit delay.
- **OFF:** Disarms the system

ADDING OR CHANGING CODES

Enter your 4 digit code + 8 + 02 + new code twice. If adding new code for someone else you will enter 03 or 04 or 05 etc in place of the 02.

BYPASSING A ZONE

Enter your 4 digit code + BYPASS + ZONE # (01, 02, 03, etc) + *

(NOTE: The bypass is only for this arming period. The zone is restored once you disarm.)

DOOR CHIME

Enter your 4 digit code + CHIME (This turns the chime feature ON and OFF)

RESETTING SYSTEM & CLEARING TROUBLES

Pressing the * key will show you faulted zones and check system troubles. Enter your 4 digit code followed by OFF multiple times to reset or clear system. If you have a fire alarm, you must enter your 4 digit code and OFF to reset system.

CANCEL FALSE ALARMS OR TEST SYSTEM

Available 24 hours a day - 913.432.4545

You may call this number after hours to reach our 24-hour emergency technical support technician.

IMMEDIATE DISPATCH!

PANIC BUTTONS

Press and hold as shown below to activate panic alarms.

Press and hold: **FIRE**

Press and hold: **POLICE**

Press and hold: **MEDICAL**